


Fitting Instructions

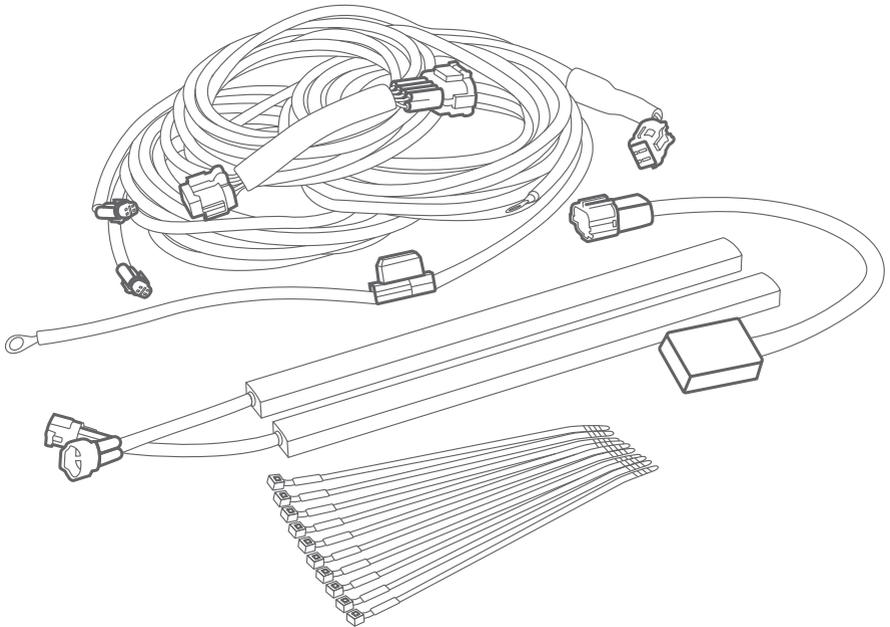

Bin Lights

Plug & Play Harness | Standard


List of components:

A



1x Bin light Plug & Play UTI harness

B

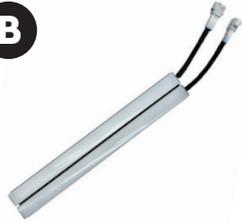

2x LED hard strip lights

C



5x Cable ties

🕒 45min 👤 1 **NOT included:** Mounting brackets or adhesive glue (Sikaflex-gluе recommended).


Proper use:

Installation of the Bin light UTI harness must be done by a specialist workshop or an appropriately qualified technician. Read all of the instructions carefully before fitting.

Fitting instructions:

The **Bin light Plug and Play UTI harness (A)** ("the harness") should be routed *underneath* the vehicle and secured fastly using the **cable ties (C)** provided.


- 1**
 - i. Disconnect the earth terminal (Black) from the vehicle's battery. **Not doing so can lead to injury or damage the vehicle's electrical system.**
 - ii. Connect the **ring terminal** (labelled **+12V**) from the harness onto the battery (Red).

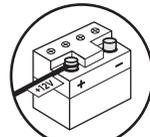

1ii

- 2** Route the harness wires underneath the vehicle body toward the taillights.

- 3**
 - i. Remove **2x taillights** (left and right)
 - ii. Remove the connectors from both light clusters.
 - iii. Plug the harness connectors (labelled **LH** and **RH**) into the vehicle harness and taillights on both sides.
 - iv. Secure the UTI (labelled **UTI**) on the left or right side of the vehicle using a cable tie.
 - v. Refit both taillights.

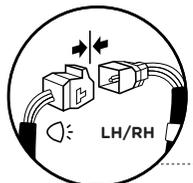

3

Figure 1. Underside of vehicle

- 4**
 - i. Route the harness wiring (labelled **LH Bin Light "Left"** and **RH Bin Light "Right"**) back towards the cab of the vehicle.
 - ii. Find the opening in the corner of the bin closest to the cab and route the harness upwards towards the bin of the vehicle.
 - iii. Run the wires (labelled **LH Bin Light "Left"** and **RH Bin Light "Right"**) from the corners to the preferred position of the **LED hard strip lights (B)** ("the bin lights").
- 5**
 - i. Mount the bin lights on both sides of the vehicle's bin, underneath the lip of the bin (above the wheels), using brackets or adhesive glue.
 - ii. Connect the harness (**LH Bin Light** and **RH Bin Light**) to both bin lights.

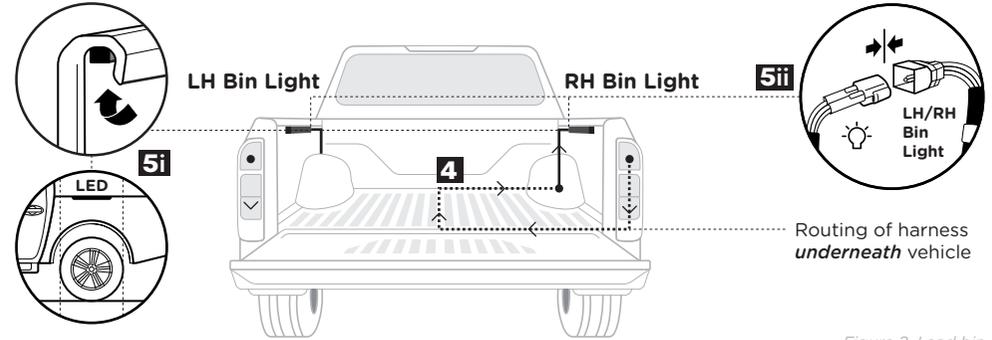


Figure 2. Load bin

- 6** Reconnect the "Earth" terminal (Black) to the vehicle's battery.
- 7**
 - i. Test both bin lights to ensure they work correctly by opening the vehicle using the remote. Both lights should turn on and switch off automatically after **60 seconds**.
 - ii. After fitting the harness check that the vehicles' **indicators, lights, fog lights, brake lights and reverse lights** are working.



- 8** Secure the harness underneath the vehicle using the **cable ties** provided.
- 9**
 - i. Complete all the information on the back of these fitting instructions.
 - ii. **Store these fitting instructions with the vehicle's service documentation in the cubbyhole/glove compartment.**

Terms of use

All claims under the warranty will lapse in the event of improper use or modification of the Bin light UTI harness or any of its components. We accept no liability for any errors/omissions within the fitting instructions. All details & illustrations are non-binding.

Fitment Centre/Dealer Information:

Vehicle VIN nr:	
------------------------	--

Fitter name:	
Signature:	

Supervisor:	
Signature:	

Should you require any technical assistance please contact Derick Kunz:
012 804 1607 • 072 023 6344 • tech@sactec.co.za